# PD8-6210/PD8-6310 Dual-Line 6-Digit Batch Controllers Data Sheet













MeterView Pro

**USB** Install

- Fully Approved Explosion-Proof Batch Controllers
- Dual-Line 6-Digit Display, 0.6" (15 mm) & 0.46" (12 mm)
- CapTouch Through-Glass Button Programming
- Display Mountable at 0°, 90°, 180°, & 270°
- Isolated 24 VDC @ 25 mA Transmitter Power Supply
- Easy Field Scaling in Engineering Units without Applying an Input
- 4 Relays with Interlocking Capability + Isolated
   4-20 mA Output
- Free PC-Based, On-Board, MeterView Pro USB Programming Software
- SunBright Display Standard Feature; Great for Outdoor Applications
- Start / Pause / Stop, Change Batch with Front Panel Buttons
- Display Batch Total, Rate, Grand Total, Count or Preset
- Single or Multi-Stage Batch Control (Up to 4 Relays)
- Front Panel or Remote Total Reset
- Automatic Overrun Correction
- Automatic or Manual Batch Control
- Low or High Flow Alarms while Batching
- 32-Point Linearization, Square Root Extraction and Programmable Exponent Function

- Operating Temperature Range: -55 to 65°C (-67 to 149°F)
- CSA Certified as Explosion-Proof / Dust-Ignition-Proof / Flame-Proof
- ATEX and IECEx Certified as Dust-Ignition-Proof / Flame-Proof
- Input Power Options: 85-265 VAC / 90-265 VDC or 12-24 VDC / 12-24 VAC
- Programmable Display, Function Keys & Digital Inputs
- Flanges for Wall or Pipe Mounting
- Explosion-Proof Aluminum or Stainless Steel NEMA 4X / IP68 Enclosures
- On-Board RS-485 Serial Communications
- Modbus RTU Communication Protocol Standard
- Password Protection
- Four 3/4" NPT Threaded Conduit Openings
- 3-Year Warranty

#### **ANALOG INPUTS**

0-20 mA, 4-20 mA, 0-5 V, 1-5 V, and ±10 V Inputs

#### **PULSE INPUTS**

Pulse, Open Collector, NPN, PNP, TTL, Switch Contact, Sine Wave (Coil), Square Wave Inputs







PD8-154 **4-Point Alarm Annunciator** 



PD8-6100 **Strain Gauge Meter** 

⑤ Ex IECEx (€)



PD8-158 **8-Point Alarm Annunciator** 



PD8-6200
Analog Input
Flow Rate/Totalizer



PD8-765

Process &

Temperature Meter



PD8-6210

Analog Input Batch
Controller



PD8-6000
Process Meter



PD8-6262

Analog Dual-Input
Flow Rate/Totalizer



PD8-6001
Feet & Inches
Level Meter



PD8-6300
Pulse Input
Flow Rate/Totalizer



PD8-6060

Dual-Input

Process Meter



PD8-6310
Pulse Input
Batch Controller



PD8-6080 Modbus® Scanner with Dual Analog Input



PD8-6363

Pulse Dual-Input
Flow Rate/Totalizer



PD8-6081 Feet & Inches Modbus® Scanner




PD8-7000 **Temperature Meter** 



TAB	LE (	OF (	CON	NTEN	NTS

OVERVIEW			4
TRANSMITTER POWER SUPPLIES			5
ADVANCED DISPLAY FEATURES			6
BATCH CONTROLLER FEATURES			6
TOTAL RESET CAPABILITIES .			7
CAPTOUCH THROUGH-GLASS BUT	ТΟ	NS	8
QUICK & EASY SCALE & PROGRAMMING METHODS .			9
DIGITAL COMMUNICATIONS			10
PHYSICAL FEATURES			11
OPERATIONAL FEATURES			13
ACCESSORIES			14
DIMENSIONS			16
CONNECTIONS			16
SPECIFICATIONS			17
ORDERING INFORMATION			22

#### **OVERVIEW**

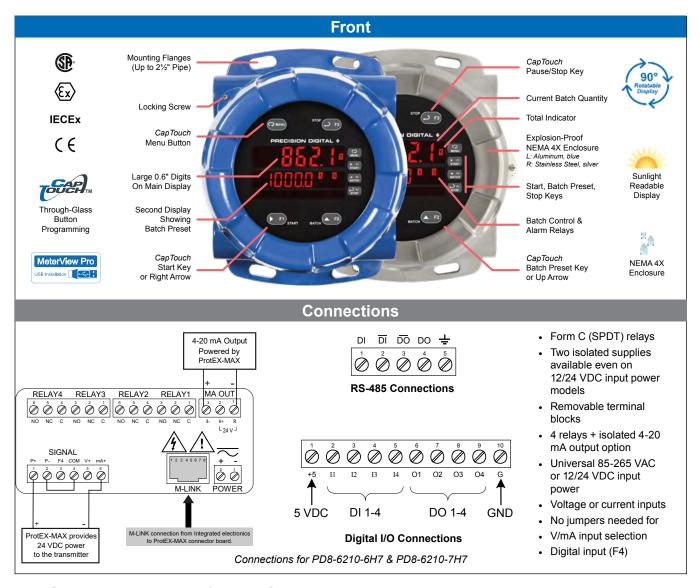

# The Only Explosion-Proof Batch Controller You Will Ever Need

The ProtEX-MAX PD8-6210/6310 explosion-proof batch controllers are specifically designed for displaying flow rate and total from flowmeters with analog or pulse outputs.

The first thing you notice about the ProtEX-MAX is its modern looking, rugged, explosion-proof housing with convenient mounting flanges, available in aluminum or stainless steel. Housed inside this enclosure is a dual-line, 6-digit display that is usually setup to show the current batch quantity and the batch preset on the two lines. START, BATCH, and STOP buttons (which can be operated remotely or without removing the cover) come setup by default for batch control operation. The START button starts the batch. The BATCH button shows the preset value. The STOP button pauses or stops the batch.

The PD8-6210/6310 is certified by CSA as Explosion-Proof / Dust-Ignition-Proof / Flame-Proof and is ATEX and IECEx Certified as Dust-Ignition-Proof / Flame-Proof.

One of the more convenient features of the ProtEX-MAX is its through-glass CapTouch buttons which allow the controller to be operated without removing its cover. Just put your finger on the glass over the button to actuate it. The PD8-6210/6310 can also provide 5, 10, or 24 VDC to power the flowmeter.


A ProtEX-MAX batch controller can be programmed for a wide variety of applications. Setup is easy for single or multi-stage batching. Automatic overrun correction keeps the batch size accurate, even over time. The PD8-6210/6310 can display the number of batches that have been run and the total amount of product that has been batched. These features and capabilities can easily be programmed without removing the cover using CapTouch buttons in a hazardous area or with free MeterView Pro PC-based software in a safe area.

### TRANSMITTER POWER SUPPLIES

#### **Meter Powers Transmitter**


One of the most useful standard features of the PD8-6210/6310 is its built-in isolated 24 V @ 25 mA power supply to power the transmitter. This feature saves money by eliminating an external power supply and also simplifies wiring by reducing the number of devices in the loop. It can be configured for 5, 10, or 24 V (default) by means of a simple internal jumper. This power supply is even available on meters that are powered from DC power (24 V @ 25 mA). To use an external power supply instead of the internal power supply, simply make connections to different terminals on the ProtEX-MAX.

The following diagram illustrates how to wire the ProtEX-MAX so it will power the transmitter:

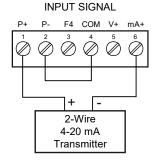

# **Meter Powers 4-20 mA Output**

Not only can the ProtEX-MAX power the 4-20 mA input signal, but an additional power supply of 24 V @ 25 mA is provided with the 4-20 mA output option to power the 4-20 mA output.

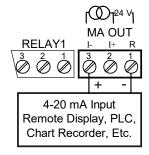

### **Fuse Prevents Current Overload**

Another very useful aspect of the ProtEX-MAX is that the current input is protected against current overload by a resettable fuse. The fuse limits the current to a safe level when it detects a fault condition, and automatically resets itself when the fault condition is removed.



### ADVANCED DISPLAY FEATURES

# **Easy to Use**

The user-friendly dual-line display makes the ProtEX-MAX easy to set up & program. No jumpers to set for input selection. All setup & programming is done via the front panel.





**Input Setup** 

**Display Setup** 

# **Rounding for Even Steadier Display**

The rounding feature is used to give the user a steadier display with fluctuating signals. It causes the display to round to the nearest value according to the rounding value selected (1, 2, 5, 10, 20, 50, or 100). For example, with a rounding value of 10, and an input of 12346, the display would indicate 12350.

# **Quick Preset Changes**

The front panel BATCH key is configured by default to access the preset menu. The preset may be changed quickly and easily between batches without the need to enter setup menus.

#### **Non-Resettable Grand Total**

The user can set up the grand total to be non-resettable by entering a specific password. Once this is done, the grand total can never be reset.

#### **Total Conversion Factor**

The user can enter a conversion factor that allows the controller to display total in different units than the rate. For instance, an operator could measure flow rate in gallons per minute and grand total in hundredths of acre-feet.

#### **On-Board Digital Input**

The PD8-6210 and PD8-6310 include a digital input as standard. This digital input can operate with the tare, reset tare, or interlock relays feature, force relays on from a signal from a PLC or relay on other equipment, and much more. This is ideal for installations where the meter is inaccessible behind a cover, or where an additional function key is needed for customized operation.

#### **Clearly Labeled Displays**

The main display alternates the display to show the controller state when in pause or stop mode. When displaying rate, grand total, batch count, or preset, the lower display alternates between the display value and the function or unit of measure.





**Batch Total & Preset** 

**Alternating Display** 

# **BATCH CONTROLLER FEATURES**

A ProtEX-MAX batch controller can be programmed for a wide variety of applications. Setup is easy for single or multi-stage batching. Automatic overrun correction keeps the batch size accurate, even over time and with system wear. It can record grand total, or non-resettable grand total with a time base of seconds, minutes, hours or days. The user can program a conversion factor, and configure a non-resettable grand total, and password protection.

#### **Manual or Automatic Batch Control**


Batches may be started manually with the START front panel button, or with a remote digital input trigger. Batches may also be programmed to start automatically after a 0 to 999.9 second delay after the end of the last completed batch. A manually stopped batch will not automatically restart. The START button or digital input must be used.

# **Automatic Overrun Correction**

The ProtEX-MAX batch controller will correct for batch overrun or shortages automatically. By tracking the amount the batch was off by, the controller will automatically adjust the batch by modifying the batch relay deactivation time.

# Single and Multi-Stage Batching

The ProtEX-MAX can be used as a single or multi-stage batch controller. Relays assigned to the total act as batch control relays, with additional relays beyond the first including a preclose value. The preclose deactivates the relay before the batch is finished, to allow slower fill rates and a more accurate batch finish. With expansion module relays, up to eight-stage batching is possible. Each additional stage batching relay has an individually programmable preclose amount.

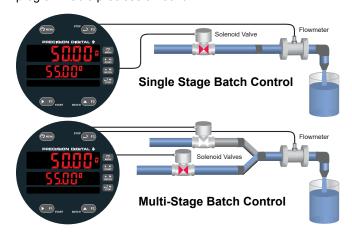

# **Easily Choose Your Display Information**



#### **Batch Total & Preset**

The preset on the second display provides even quicker access to the preset menu just by using the arrow keys to change the value.



#### **Batch Total & Rate**

The rate on the second display may be alternated with units for variable flow batching systems. Rate alarms may also be used during the batch process.



#### **Batch Total & Batch Count**

The batch count on the second display, tracks completed batches. The count may be set back to 0 with the reset menu.



#### **Batch Total & Grand Total**

A grand total with overflow digits for up to a 9 digit total may be displayed in the second display, with password protection and non-resettable programmable features.

# **Grand Total Displays Up to 9 Digits**

These batch controllers can display up to nine digits of total flow with the grand total feature. In the diagrams below, the batch controller is displaying 532,831,470 by toggling between a display of "oF 532" and "831470". Notice the (GT with arrow ▲ symbol) is lit up indicating the display is in a grand total overflow mode.







**Batch Total & Preset** 

**Alternating Display** 

#### **Grand Total & Rate Alarms**

The ProtEX-MAX's four internal and four external relays can be set up to alarm when the grand total reaches a user-defined set point or when the rate is above or below a certain value. Rate alarms are only activated when the batching process is running. A variety of reset modes are available and the user can also program time delays and fail-safe operation.

# **Four Types of Password Protection**

The ProtEX-MAX offers 4 types of password protection. Level 1 protection allows the operator use of only the 3 pre-configured function keys on the front panel without a password. Level 2 protection allows the operator use of only the function keys and the ability to change set points without a password. Level 3 protection restricts the function keys and all configuration menus without a password. Grand total reset protection prevents the total from being reset manually.

# **OUTPUTS**

# **Relay Outputs**



The ProtEX-MAX includes four 3 A Form C relays (SPDT) with multiple programmable functions. One (relay 1) should always be used for batch control. Other relays may be configured as additional batch relays, with or without preclose for multi-stage batching or as alarms for the rate or grand total. Each alarm has multiple power loss fail-safe options. Alarm relays can be configured for proper protective action upon input loop break. Alarm relay ON and OFF delay times are user adjustable. Up to eight front panel indicators show alarm and/or relay state. All alarm relays can be configured for 0-100% deadband. Rate alarms are only active while a batch is running.

# **Relay Operation/Configuration**

There are powerful relay functions that can be configured in the ProtEX-MAX controller, including:

- · Single and multiple stage batch control with preclose
- · Manual and automatic batch control modes
- · Rate alarms during batch process
- · Grand total alarms
- · Sampling function
- · User selectable fail-safe operation
- Relay action for loss (break) of 4-20 mA input signal (PD8-6210)
- Time delay (on and off), independent for each alarm relay

#### **Analog Output**

The isolated analog retransmission signal can be configured to represent the batch total, grand total, maximum (peak) value, minimum (valley) value, the value for any of the eight relay set points, manual setting control, or Modbus input. While the output is nominally 4-20 mA, the signal will accurately accommodate under- and over-ranges from 1 to  $^{23}$  mA

# **Isolated Transmitter Power Supplies**

A powerful 24 V @ 25 mA power supply is a standard feature on the ProtEX-MAX controller. It can be configured for 5, 10, or 24 V (default) by means of a simple internal jumper (see manual). An additional power supply (24 V @ 40 mA) is standard with the 4-20 mA output option.

### CAPTOUCH THROUGH-GLASS BUTTONS

The ProtEX-MAX is equipped with four capacitive sensors that operate as through-glass buttons so that they can be operated without removing the cover (and exposing the electronics) in a hazardous area or harsh environment. CapTouch buttons are designed to protect against false triggering and can be disabled for security by selecting DISABLE on the switch labeled NO-CONTACT BUTTONS located on the connector board.

# **CapTouch Buttons**

To actuate a button, press one finger to the window directly over the marked button area. When the cover is removed or replaced, the CapTouch buttons can be used after the meter completes a self-calibrating routine. The sensors are disabled when more than one button is pressed, and they will automatically re-enable after a few seconds. When the cover is removed, the four mechanical buttons located on the right of the faceplate are used.

The CapTouch Buttons are configured by default to duplicate the function of the front panel mechanical pushbuttons associated with the integrated meter.



### QUICK & EASY SCALE & PROGRAMMING METHODS


The ProtEX-MAX can be programmed either via the front panel push buttons or free, PC-based MeterView Pro software. MeterView Pro is resident on the ProtEX-MAX and is accessed by a provided USB cable, so it is by far the easiest way to program the ProtEX-MAX. The ProtEX-MAX can be calibrated either by applying a known signal or scaled by entering a desired value with the front panel buttons or MeterView Pro software. Most customers will use the scaling method because it is simpler and does not require a calibrated signal source. Selecting the input to be current or voltage is done with the front panel buttons or MeterView Pro software. Once programming is completed it can be locked with a password.

# Free PC-Based MeterView Pro USB Programming Software & Cable



The ProtEX-MAX comes preloaded with free MeterView Pro programming software that connects and installs directly to your PC with a standard USB cable, also provided free with each instrument. This eliminates the need to insert CDs, install drivers, or download software from the internet. When you connect your ProtEX-MAX to your PC, MeterView Pro is downloaded to your PC, the software automatically selects the model you are programming, and you're ready to start programming immediately.

Further simplifying the programming process, the ProtEX-MAX can be powered from the USB port, so no need to apply external power while programming your meter. In addition to programming, the software will also allow you to monitor, and datalog a ProtEX-MAX using your PC. You can also generate and save programming files for later use.

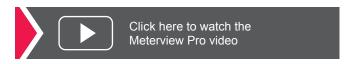

#### **DIGITAL COMMUNICATIONS**

# **Modbus RTU Serial Communications**

With onboard RS-485 serial communication, the ProtEX-MAX can communicate with any Modbus *master* device using the popular Modbus communications protocol that is included in every ProtEX-MAX. In addition to the typical Modbus capabilities of reading PVs and writing set points, below are some examples of other things that can be done with the meter's Modbus communications:

- · Start, pause, stop, or change preset values
- Send a 6-character message to the second display upon an event
- Remote user control (i.e. change set points, acknowledge alarms)
- · Read rate, total, grand total, batch count, etc.





Modbus PV Input

**Remote Message** 



Click here for more information on the PROVU's Modbus capabilities

# Serial Adapters & Converters\*



PDA7485-I RS-232 to RS-422/485 Isolated Converter



PDA8485-I USB to RS-422/485 Isolated Converter



<sup>\*</sup>All adapters and connectors supplied with appropriate cables.

# Integrated Digital I/O and Serial Communications



#### **Digital I/O Connections**

Four digital inputs and four digital outputs come standard with the ProtEX-MAX. External digital inputs can function similarly to the front panel function keys or digital input F4. They can be configured to trigger certain events (i.e. acknowledge/ reset alarms, reset max and/or min values, disable/enable all output relays, and hold current relay states), or provide a direct menu access point. The inputs can be connected to a multi-button control station to provide the user with remote control of the four front panel push buttons.

Digital outputs can be used to remotely monitor the ProtEX-MAX's alarm relay output states, or the states of a variety of actions and functions executed by the meter.

**Note:** The onboard digital inputs (1-4) are configured at the factory to function identically to the front panel pushbuttons (Menu, F1, F2, & F3) in order to work with the CapTouch buttons. Changing the programming of the digital inputs will affect the function of the CapTouch buttons.



#### **Serial Communications Connections**


ProtEX-MAX meters come with an RS-485 connection for serial communications with other digital devices. The industry standard Modbus RTU protocol is included with every meter.

# **PHYSICAL FEATURES**

The ProtEX-MAX is designed for ease-of-use in safe and hazardous area applications, and is housed in a rugged NEMA 4X explosion-proof enclosure, available in either aluminum or stainless steel. The ProtEX-MAX can operate over a wide temperature range (-55 to 65°C / -67 to 149°F), includes removable screw terminal connectors, can have up to four relays and a 4-20 mA output, and features through-glass buttons for easy meter operation without the need to remove the cover. All of these features are backed by a 3-year warranty.

# **Super-Bright LED Display**

The ProtEX-MAX features a dual-line 6-digit display with super-bright LEDs, our brightest ever. These allow the display to be read in any lighting condition, even in direct sunlight.

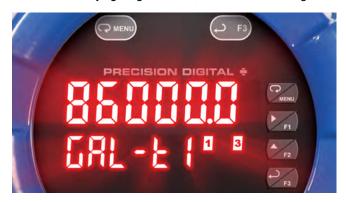

# **CapTouch Through-Glass Buttons**

The ProtEX-MAX is equipped with four capacitive sensors that operate as through-glass buttons so that it can be programmed and operated without removing the cover (and exposing the electronics) in a hazardous area. These buttons can be disabled for security by selecting the DISABLE setting on the NO-CONTACT BUTTONS switch located on the back of the electronics module, inside the enclosure.

### **Rugged Explosion-Proof Enclosure**

The ProtEX-MAX is housed in a rugged NEMA 4X, 7, & 9, IP68 aluminum or stainless steel enclosure, designed to withstand harsh environments in safe and hazardous areas.



# **Wide Viewing Angle**

Customers can't always look at the display from straight on, so the window and display module have been optimized to provide a wide viewing angle of approximately  $\pm$  40°; nearly twice that of the competition.



# **Built-In Mounting Flanges**

The ProtEX-MAX is equipped with two slotted flanges for wall mounting or NPS  $1\frac{1}{2}$ " to  $2\frac{1}{2}$ " or DN 40 to 65 mm pipe mounting.



# **Flexible Mounting & Wiring**

The ProtEX-MAX features four 3/4" NPT threaded conduit openings so that wiring can be routed to the most convenient conduit connection(s).



# **Rotatable Display**

The ProtEX-MAX rotatable display, along with four available conduit connections, provide for numerous installation options. The display can be rotated in 90° increments. Rotate it 90° for horizontal mounting.





**Vertical Mounting** 

**Horizontal Mounting** 

# **Perfect & Secure Fit Every Time**

The internal cast rails ensure the ProtEX-MAX assembles together perfectly, quickly and securely; and everything lines up for optimal viewing every time. There are no standoffs to worry about breaking or getting out of alignment. The display module snaps into the built-in rails on the enclosure making assembly a snap, while pressing the display as close to the glass as possible to improve wide angle viewing. No tools are needed to install or remove it.

# **PDA-SSTAG Stainless Steel Tags**

PDA-SSTAG is a laser etched stainless steel tag accessory for any Precision Digital meter. The tag features custom text for equipment identification, instruction, or whatever else is needed in your facility. Each tag comes with a stainless steel wire and lead seal for easy mounting wherever you need it.



#### **Removable Screw Terminal Connectors**

Industrial applications require screw terminal connections for easy field wiring and the ProtEX-MAX goes one step further in convenience by also making them removable.



Connections for PD8-6210-6H7 & PD8-6210-7H7 shown. The above photograph is representative of the back of the PD8-6310 in every regard except for the signal input connector. See page 14 for actual input signal connections.

#### **USB Port MeterView Pro**



# **Hazardous Area Certification**

The ProtEX-MAX is certified by CSA as Explosion-Proof / Dust-Ignition-Proof / Flame-Proof and is approved by ATEX and IECEx as Dust-Ignition-Proof / Flame-Proof.

# **Wide Operating Temperature Range**

The ProtEX-MAX can operate from -55 to 65°C (-67 to 149°F) meaning it can be installed in a wide variety of indoor and outdoor industrial applications.

# MANUAL MULTI-STAGE BATCH CONTROL OPERATION

# **System Setup**

Both valves are closed with an empty barrel in place. The batched total is displayed in the upper display, the preset is selected for the lower display.

#### **Batch Start**

The START button is pressed. Both valves open. The barrel begins to fill.

#### **Preclose Valve**

When the batch total reaches a value of 50.00 (Preset [55.00] – Preclose [5.00]) the full-flow valve closes. The fill rate of the tank slows as a result.

# **Completed Batch**

When the batch total equals the preset amount, the restricted-flow valve closes. The barrel is now full. If some overrun occurs, the next batch will adjust for this offset amount to maintain accuracy.

# **Change Preset**


After placing a new, empty barrel, a new preset fill amount may be selected with the Batch key, while the process is stopped.

#### **Begin New Batch**

Press the START key and a new batch will begin. With both valves open, the process continues.

#### Pause/Stop

At any time, the STOP button may be pressed, once to Pause the process, or twice to cancel the batch, which stops the process.

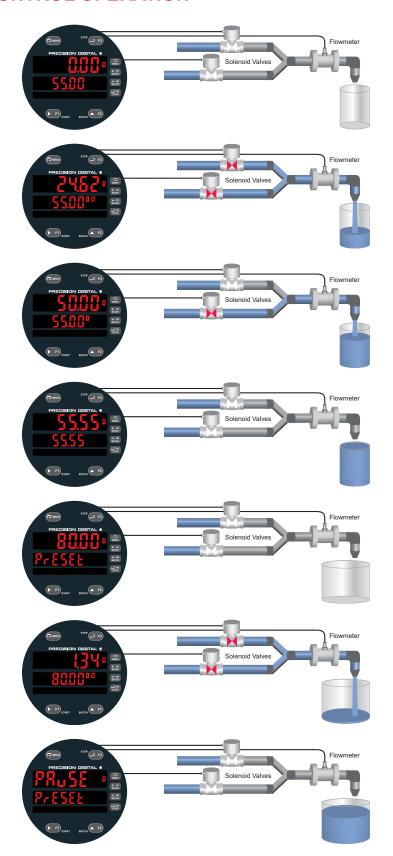

# **ACCESSORIES**

### **PD9501 Multi-Function Calibrator**



This PD9501 Multi-Function Calibrator has a variety of signal measurement and output functions, including voltage, current, thermocouple, and RTD.

Model	Description	
PD9501	Multi-Function Calibrator	

# PD9502 Low-Cost Signal Generator



The PD9502 is a low-cost, compact, simple to use 4-20 mA or 0-10 VDC signal generator. It can easily be set for 0-20 mA, 4-20 mA, 0-10 V or 2-10 V ranges. Signal adjustment is made with a one-turn knob. A 15-27 VDC wall plug is provided with the instrument. Optional USB power bank is available.

Model	Description
PD9502	Low-Cost Signal Generator

#### **WARNING**

These accessories do not carry hazardous area approvals and are thus not suitable for location in hazardous areas. The use of
additional protective devices may allow them to be installed in a safe area and connected to a device in a hazardous area. User should
consult a professional engineer to determine suitability of these products for their specific application.

# **Complete Product Line of Displays and Controllers**

# **IN ALL SHAPES, SIZES & LOCATIONS**







Large Dual-Line 6-Digit Display



24 VDC Transmitter Power Supply



MeterView® Pro USB Programming Software



Universal 85-265 VAC or 12-24 VDC Input Power Options



4-20 mA, 0-10 V, Thermocouple, RTD, Strain Gauge, High Voltage, & Modbus Inputs



Up To Four 3 A Form C Relays (SPDT)



Go to PREDIG.COM for details on PROVU, ProtEX-MAX and Helios Series Meters


4-20 mA Output


4-20 mA Output

Powered by


ProtEX-MAX

#### **DIMENSIONS**

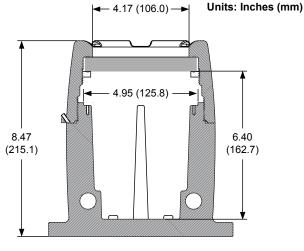

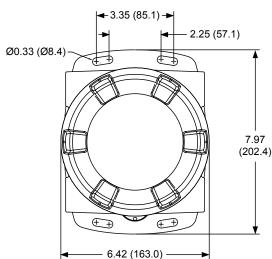




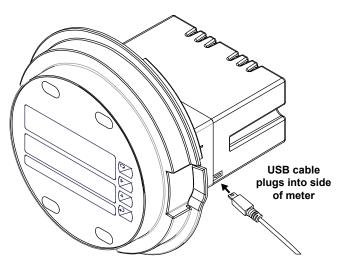

# **CONNECTIONS**

#### PD8-6210


- Form C (SPDT) relays
- Two isolated supplies available even on 12/24 VDC input power models

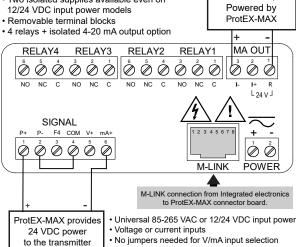

• Digital input (F4) Connections for PD8-6210-6H7 & PD8-6210-7H7


#### PD8-6310

- Form C (SPDT) relays
- Two isolated supplies available even on 12/24 VDC input power models
- · Removable terminal blocks

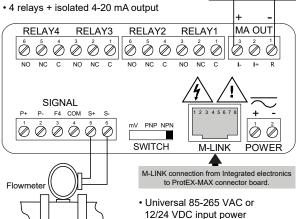


• Digital Input (F4)

Connections for PD8-6310-6H7 & PD8-6310-7H7

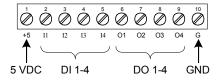

**Digital I/O Connections** 

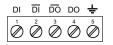

**RS-485 Connections** 

### SPECIFICATIONS

Except where noted all specifications apply to operation at +25°C.

#### General

**Display:** Main display: 0.60" (15 mm) high. Second display: 0.46" (12 mm) high. Both are 6 digits (-99999 to 999999), red LEDs. **Default Display Assignment:** The upper display shows batch total. The lower display shows rate with alternating units, and can be switched to show grand total, batch count, or preset with the STOP key.

**Custom Display Assignment:** The upper and lower displays may be assigned to rate, total, grand total, batch count, preset, set points, units (lower display only), alternating R & T, R & GT, preset & rate, max & min, or a Modbus display register. Any rate/total/grand total display may be programmed to alternate with a custom unit or tag. **Alternating Display:** Displays alternate every 10 seconds when display is selected or the batch is paused.

Display Intensity: Eight user selectable intensity levels

Display Update Rate: 5/second (200 ms) Overrange: Display flashes 999999 Underrange: Display flashes 999999

**Programming Methods:** Four CapTouch through-glass buttons when cover is installed. Four internal pushbuttons when cover is removed.

**F4 Digital Input Contacts:** 3.3 VDC on contact. Connect normally open contacts across F4 to COM.

F4 Digital Input Logic Levels: Logic High: 3 to 5 VDC

Logic Low: 0 to 1.25 VDC

Noise Filter: Programmable from 2 to 199 (0 will disable filter)
Filter Bypass: Programmable from 0.1 to 99.9% of calibrated span.
Recalibration: Recommended at least every 12 months.
Max/Min Display: Max (Peak) / min (Valley) readings reached by the process are stored until reset by the user or until power is

**Password:** Three programmable passwords restrict modification of programmed settings and two prevent resetting the totals.

Non-Volatile Memory: All programmed settings are stored in non-volatile memory for a minimum of ten years if power is lost.

Power Options: 85-265 VAC 50/60 Hz, 90-265 VDC, 20 W max, or optional model with 12-24 VDC ±10%, 15 W max.

**Fuse:** Required external fuse: UL Recognized, 5 A max, slow blow; up to 6 controllers may share one 5 A fuse.

Isolated Transmitter Power Supply: Terminals P+ & P-: 24 VDC ± 10%. internally selectable jumper for 24, 10, or 5 VDC supply. All models transmitter supply rated @ 25 mA max.

**Normal Rejection Mode:** Greater than 60 dB at 50/60 Hz (PD8-6210)

**Isolation:** 4 kV input/output-to-power line. 500 V input-to-output or output-to-P+ supply.

**Overvoltage Category:** Installation Overvoltage Category II: Local level with smaller transient overvoltages than Installation Overvoltage Category III.

#### **Environmental:**

T6 Class operating temperature range Ta = -55 to 60°C T5 Class operating temperature range Ta = -55 to 65°C. Storage temperature range: -55 to 85°C (-67 to 185°F). Relative humidity: 0 to 90% non-condensing.

**Max Power Dissipation:** Maximum power dissipation limited to 15.1 W. See PD8-6210/6310 instruction manual for additional details

**Connections:** Removable screw terminal blocks accept 12 to 22 AWG wire, RJ45 for external relays, digital I/O, and serial communication adapters.

**Mounting:** Two slotted flanges for wall mounting or NPS  $1\frac{1}{2}$ " to  $2\frac{1}{2}$ " or DN 40 to 65 mm pipe mounting

Weight: Aluminum: 14.7 lbs (6.67 kg); Stainless Steel: 23.5 lbs

**Dimensions:** 6.42" x 7.97" x 8.47" (W x H x D) (163 mm x 202 mm x 215 mm)

Warranty: 3 years parts & labor

**USB Connection:** Compatibility: USB 2.0 Standard, Compliant. Connector Type: Micro-B receptacle. Cable: USB A Male to Micro-B Cable. Driver: Windows 98/SE, ME, 2000, Server 2003/2008, XP 32/64-Bit, Vista 32/64-Bit, Windows 7 32/64-Bit, Windows 10 32/64-Bit. Power: USB Port.

# PD8-6210 Analog Input

Inputs: Field selectable: 0-20, 4-20 mA,  $\pm 10$  VDC (0-5, 1-5, 0-10 V), Modbus PV (Slave)

**Accuracy:** ±0.03% of calibrated span ±1 count, square root & programmable exponent accuracy range: 10-100% of calibrated span

**Temperature Drift:** 0.005% of calibrated span/°C max from 0 to 65°C ambient, 0.01% of calibrated span/°C max from -40 to 0°C ambient

**Signal Input Conditioning:** Linear, square root, programmable exponent, or round horizontal tank volume calculation.

Multi-Point Linearization: 2 to 32 points

Programmable Exponent: 1.0001 to 2.9999

Low-Flow Cutoff: 0-999999 (0 disables cutoff function)

**Decimal Point:** Up to five decimal places or none: dddddd, dddddd, dddddd, dddddd, dddddd, or dddddd.

Calibration Range:

Input Range Minimum Span Input 1 & 2

4-20 mA 0.15 mA ±10 V 0.10 V

An error message will appear if input 1 and input 2 signals are too close together.

**Input Impedance:** Voltage ranges: greater than 1 M $\Omega$ . Current ranges: 50 - 100  $\Omega$  (depending on resettable fuse impedance).

**Input Overload:** Current input protected by resettable fuse, 30 VDC max. Fuse resets automatically after fault is removed.

#### PD8-6310 Pulse Input

Inputs: Field selectable: Pulse or square wave 0-5 V, 0-12 V, or 0-24 V  $\,$ 

@ 30 kHz; TTL; open collector 4.7 k $\Omega$  pull-up to 5 V @ 30 kHz; NPN or PNP transistor, switch contact 4.7 k $\Omega$  pull-up to 5 V @ 40 Hz; coil (sine wave) 40 mVp-p min @ 10 kHz; Modbus PV (Slave)

Low Voltage Mag Pickup (Isolated): Sensitivity: 40 mVp-p to 8 Vp-p Minimum Input Frequency: 0.001 Hz - Minimum frequency is dependent on high gate setting.

**Maximum Input Frequency:** 30,000 Hz (10,000 for Low Voltage Mag Pickup)

**Input Impedance:** Pulse input: Greater than 300 k $\Omega$  @ 1 kHz. Open collector/switch input: 4.7 k $\Omega$  pull-up to 5 V.

Accuracy: ±0.03% of calibrated span ±1 count

**Display Update Rate:** Total: 10/sec, Rate: 10/sec to 1/1000 sec **Temperature Drift:** Rate display is not affected by changes in temperature.

Multi-Point Linearization: 2 to 32 points

Low-Flow Cutoff: 0-999999 (0 disables cutoff function)

Decimal Point: Up to five decimal places or none: dddddd, dddddd,

dddddd, dddddd, dddddd, or dddddd.

**Calibration:** May be calibrated using K-factor, scale using internal calibration, or calibrate by applying an external calibration signal. **K-Factor:** Field programmable K-factor converts input pulses to rate in engineering units. May be programmed from 0.00001 to 999,999 pulses/unit.

**Calibration Range:** Input 1 signal may be set anywhere in the range of the controller; input 2 signal may be set anywhere above setting.

**Filter:** Programmable contact de-bounce filter, 40 to 999 Hz maximum input frequency allowed with low speed filter.

Time Base: Second, minute, hour, or day

**Low Gate:** 0.1-99.9 seconds; this function determines how often the incoming pulses are calculated and the rate display is updated. **High Gate:** 2.0-999.9 seconds; this function determines how long to wait for pulses before the display goes to zero. This function is used to display slow pulse rates.

Note: The combination of the low and high gate functions makes it possible to have a fast display update for fast pulse rates while displaying slow pulse rates, if needed. For example: If the low gate is set to 1.0 second and the high gate to 999.9 second, with a fast pulse rate the display is updated every second; with a slow pulse rate the controller is capable of waiting up to 999.9 seconds before calculating the rate, making it possible to display a very slow rate down to 1 pulse/999.9 second (0.001 pulse/second).

### **Batch Controller**

Rate Display Indication: 0 to 999999, lead zero blanking. "R" LED illuminates while displaying rate.

Total Displays & Grand Total Overflow: 0 to 999,999; automatic lead zero blanking. "T" LED is illuminated while displaying batch total and "GT" for grand total. Up to 999,999,999 with total-overflow feature. "oF" is displayed to the left of grand total overflow and ▲ LED is illuminated.

**Batch Total Decimal Point:** Up to five decimal places or none: dddddd, dddddd, dddddd, dddddd, or dddddd. Total decimal point is independent of rate decimal point.

**Totalizer:** Calculates total based on rate and field programmable multiplier to display total in engineering units. Time base must be selected according to the time units in which the rate is displayed. **Total Conversion Factor:** 0.00001 to 999,999

**Batch Preset:** 0.00001 to 999,999 based on batch total decimal point.

**Automatic Batch Restart Delay:** 00000.1 to 999.9 seconds. The batch will automatically restart after completion of the last batch. **Grand Total Rollover:** Totalizer rolls over when display exceeds 999,999,999. Relay status reflects the display value.

Grand Total Alarms: Up to seven, user selectable under Setup menu. Any set point can be assigned to grand total and may be programmed anywhere in the range of the controller for grand total alarm indication. Note that Relay 1 should always be assigned to batch control (Ł ot 위ኒ).

**Grand Total Reset:** Via front panel button, external contact closure on digital inputs, automatically via user selectable preset value and time delay, or through serial communications.

**Grand Total Reset Password:** A grand total password may be entered to prevent resetting the grand total from the front panel. **Non-Resettable Grand Total:** The grand total can be programmed as a non-resettable total by entering the password "050873". Caution: Once the Grand Total has been programmed as "non-resettable" the feature cannot be disabled

### Relays

Rating: 4 SPDT (Form C) internal and/or 4 SPST (Form A) external; rated 3 A @ 30 VDC and 125/250 VAC resistive load; 1/14 HP (≈ 50 W) @ 125/250 VAC for inductive loads

**Noise Suppression:** Noise suppression is recommended for each relay contact switching inductive loads.

**Relay Assignment:** Relays may be assigned to batch control, sampling, rate, or grand total alarms.

**Preclose:** 0-100% of batch size, individually user programmable for each additional batch control relay beyond the first.

**Alarm Deadband:** 0-100% of span, user programmable **High or Low Alarm:** User may program any alarm for high or low trip point. Unused alarm LEDs and relays may be disabled (turned off)

**Batching Relay Operation:** Single or (2 to 8) multi-relay batching with optional preclose for multi-stage operation. Each additional relay may be programmed with an individual preclose value.

**Alarm Relay Operation:** Automatic (non-latching), latching (requires manual acknowledge), sampling (based on rate or grand total), pump alternation control (2 to 8 relays), off (disable unused relays), and manual on/off control mode. Alarms are active only when the batch is running.

**Alarm Relay Reset:** User selectable via front buttons, digital inputs, or PC

- Automatic reset only (non-latching), when input passes the reset point or total is reset to zero.
- 2. Manual reset only, when batch is stopped (latching).
- 3. Manual reset only after alarm condition has cleared (latching) Note: Front panel button or digital input may be assigned to acknowledge relays programmed for manual reset. This replaces one of the standard batch control function keys. Only the PAUSE/STOP key function is possible during a batch process, so manual reset may only be done when the controller is in STOP mode.

Deadband: 0-100% of span, user programmable

Time Delay: 0 to 999.9 seconds, on & off relay time delays.

Programmable and independent for each relay.

Fail-Safe Operation: Programmable and independent for each relay

**Note:** Relay coil is energized in non-alarm condition. In case of power failure, relay will go to alarm state.

**Auto Initialization:** When power is applied, relays will reflect the state of the input. Alarms are active only when the batch is running.

### **Isolated 4-20 mA Transmitter Output**

Output Source: Rate/process, total, grand total, max, min, set

points 1-8, manual control setting, or Modbus input **Scaling Range:** 1.000 to 23.000 mA for any display range

**Calibration:** Factory calibrated: 4.000 to 20.000 = 4-20 mA output

**Analog Output Programming:** 23.000 mA maximum for all parameters: Overrange, underrange, max, min, and break

Accuracy: ± 0.1% FS ± 0.004 mA

Temperature Drift: 0.4 µA/°C max from 0 to 65°C ambient,

0.8 µA/°C max from -40 to 0°C ambient

Note: Analog output drift is separate from input drift.

Isolated Transmitter Power Supply: Terminals I+ & R: 24 VDC  $\pm$  10%. Isolated from the input at >500 V. Used to power the 4-20

mA output. All models @ 25 mA max.

External Loop Power Supply: 35 VDC maximum

**Output Loop Resistance:** 

 $\begin{array}{cccc} \mbox{Power supply} & \mbox{Minimum} & \mbox{Maximum} \\ \mbox{24 VDC} & \mbox{10 } \Omega & \mbox{700 } \Omega \\ \mbox{35 VDC (external)} & \mbox{100 } \Omega & \mbox{1200 } \Omega \end{array}$ 

Deadband: 0-100% of span, user programmable

Time Delay: 0 to 999.9 seconds, on & off relay time delays.

Programmable and independent for each relay.

Fail-Safe Operation: Programmable and independent for each relay.

Note: Relay coil is energized in non-alarm condition. In case of

power failure, relay will go to alarm state.

**Auto Initialization:** When power is applied, relays will reflect the state of the input. Alarms are active only when the batch is running.

#### **Serial Communications**

Protocol: Modbus RTU

Controller Address/Slave ID: 1 - 247

Baud Rate: 300 - 19,200 bps

Transmit Time Delay: Programmable between 0 and 199 ms or

transmitter always on for RS-422 communication

Data: 8 bit (1 start bit, 1 or 2 stop bits)

Parity: Even, odd, or none with 1 or 2 stop bits Byte-to-Byte Timeout: 0.01 - 2.54 seconds Turn Around Delay: Less than 2 ms (fixed)

Note: Refer to the PROVU Modbus Register Tables located at

www.predig.com for details.

#### **Enclosure**

Material: AL Models: ASTM A413 LM6 die-cast aluminum, copperfree, enamel coated. SS Models: ASTM A743 CF8M investmentcast 316 stainless steel

Gasket: Fluoroelastomer

Rating: NEMA 4X, IP68 Explosion-proof

Color: AL: Blue. SS: Silver. Window: Borosilicate glass

Conduits: Four 3/4" NPT threaded conduit openings

Conduit Stopping Plugs: Sold separately

Flanges: Two built-in flanges for wall and pipe mounting.

**Tamper-Proof Seal:** Cover may be secured with tamper-proof seal. **Overall Dimensions:** 6.42" x 7.97" x 8.47" (W x H x D) (163 mm x

202 mm x 215 mm)

Weight: AL: 14.7 lbs (6.67 kg). SS: 23.5 lbs (10.66 kg).

ATEX: Flameproof protection

Tamb: -55°C to +85°C

Certificate Number: Sira 19ATEX1252U

IECEx: Flameproof and dust protection

Ex db IIC Gb Ex tb IIIC Db IP66/IP68

Tamb: -55°C to +85°C

Certificate Number: IECEx SIR 19.0075U

CSA: Class I, Division 1, Groups A, B, C, D

Class II, Division 1, Group E, F, G

Class III Ex db IIC Gb Ex tb IIIC Db

Class I, Zone 1, AEx db IIC Gb Zone 21, AEx tb IIIC Db IP66/IP68/TYPE 4X Tamb: -55°C to +85°C

Certificate Number: CSA19.80011200U Class I, Division 1, Groups A, B, C, D

Class II, Division 1, Groups E, F, G

Class III

UL:

Class I, Zone 1, AEx db IIC Gb

Zone 21, AEx tb IIIC Db

Ex db IIC Gb Ex tb IIIC Db IP66/IP68/TYPE 4X Tamb: -55°C to +85°C Certificate Number: E518920

Note: The above approvals are for the enclosure only. See next page for approvals on the entire instrument.

# **General Compliance Information**

#### **Electromagnetic Compatibility**

#### **Emissions**

EN 55022

Class A ITE emissions requirements Radiated Emissions: Class A

AC Mains Conducted Emissions: Class A

#### Immunity

EN 61326-1

Measurement, control, and laboratory equipment

EN 61000-6-2

EMC heavy industrial generic immunity standard

RFI - Amplitude Modulated: 80 -1000 MHz 10 V/m 80% AM (1 kHz)

1.4 - 2.0 GHz 3 V/m 80% AM (1 kHz) 2.0 - 2.7 GHz 1 V/m 80% AM (1 kHz)

Electrical Fast Transients: ±2kV AC mains, ±1kV other Electrostatic Discharge: ±4kV contact, ±8kV air RFI - Conducted: 10V, 0.15-80 MHz, 1kHz 80% AM

AC Surge: ±2kV Common, ±1kV Differential

Surge: 1KV (CM)

Power-Frequency Magnetic Field: 30 A/m 70%V for 0.5 period

Voltage Dips: 40%V for 5 & 50 periods

70%V for 25 periods

Voltage Interruptions: <5%V for 250 periods

**Note:** Testing was conducted on meters with cable shields grounded at the point of entry representing installations designed to optimize EMC performance.

# **Product Ratings and Approvals**

CSA: Class I, Division 1, Groups B, C, D Class II, Division 1, Groups E, F, G

Class III, Division 1, T5

Class III, Division 1, T6 (Ta max = 60°C)

Ex db IIC T5

Ex db IIC T6 (Ta max = 60°C)

Ex tb IIIC T90°C Ta = -55°C to +65°C

Enclosure: Type 4X & IP66 / IP68

CSA Certificate: CSA 12 2531731

ATEX: 10 II 2 G D

Ex db IIC T\* Gb

Ex tb IIIC T90°C Db IP68 Ta = -55°C to +\*°C \*T6 = -55°C to +60°C \*T5 = -55°C to +65°C

Certificate Number: Sira 12ATEX1182X

IECEx: Ex db IIC T\* Gb

Ex tb IIIC T90°C Db IP68 Ta = -55°C to +\*°C \*T6 = -55°C to +60°C \*T5 = -55°C to +65°C

Certificate Number: IECEx SIR 12.0073X

#### ATEX/IECEx Specific Conditions of Use:

- 1. The equipment label and epoxy coating may generate an ignition-capable level of electrostatic charges under certain extreme conditions. The user should ensure that the equipment is not installed in a location where it may be subjected to external conditions (such as high-pressure steam) which might cause a build-up of electrostatic charges on non-conducting surfaces. Additionally, cleaning of the equipment should be done only with a damp cloth.
- 2. Flameproof joints are not intended to be repaired.
- All entry closure devices shall be suitably certified as "Ex d",
   "Ex t" and "IP66/68" as applicable. Suitable thread sealing
   compound (non-setting, non-insulating, non-corrosive, not
   solvent based, suitable for the ambient rating) must be used
   at the NPT conduit entries to achieve the IPx8 rating while
   maintaining the Ex protection concept.

#### Year of Construction

This information is contained within the serial number with the first four digits representing the year and month in the YYMM format.

#### For European Community

The ProtEX-MAX must be installed in accordance with the ATEX directive 2014/34/EU, the product manual, and the product certificate Sira 12ATEX1182X.

#### ORDERING INFORMATION

PD8-6210 Analog Input • Aluminum Enclosure		
85-265 VAC Model 12-24 VDC Model Options		Options Installed
PD8-6210-6H7	PD8-6210-7H7	4 Relays & 4-20 mA Output

PD8-6210 Analog Input • Stainless Steel Enclosure			
85-265 VAC Model 12-24 VDC Model		Options Installed	
PD8-6210-6H7-SS	PD8-6210-7H7-SS	4 Relays & 4-20 mA Output	

PD8-6310 Pulse Input • Aluminum Enclosure			
85-265 VAC Model	12-24 VDC Model	Options Installed	
PD8-6310-6H7	PD8-6310-7H7	4 Relays & 4-20 mA Output	

PD8-6310 Pulse Input • Stainless Steel Enclosure			
85-265 VAC Model 12-24 VDC Model		Options Installed	
PD8-6310-6H7-SS	PD8-6310-7H7-SS	4 Relays & 4-20 mA Output	

Note: 24 V flowmeter power supply standard on all models.

Accessories		
Model	Description	
PDAPLUG75	3/4" NPT 316 Stainless Steel Stopping Plug with Approvals	
PDA-SSTAG	Stainless Steel Tag	
PDA6848-SS	Pipe Mounting Kit Stainless Steel	
PDA7485-I	RS-232 to RS-422/485 Isolated Converter	
PDA8485-I	USB to RS-422/485 Isolated Converter	

#### Your Local Distributor is:



Cancer and Reproductive Harm - www.P65Warnings.ca.gov

#### Disclaimer

The information contained in this document is subject to change without notice. Precision Digital Corporation makes no representations or warranties with respect to the contents hereof, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose.

©2024 Precision Digital Corporation. All rights reserved.

PRECISION DIGITAL +